



NO	JCH-WH PARTS NO		Q' TY/ UNIT	PARTS NAME		
	RAC-25WXE	RAC-35WXE				
1	HWRAC-50WPC	A01	1	BASE		
2	HWRAC-25WXD	A01	1	COMPRESSOR		
3	HWRAC-50NX2	A04	3	PUSH NUT		
4	HWRAC-25WXD	A02	1	CONDENSER		
5	HWRAC-25WXD	A03	1	REVERSING VALVE		
6	HWRAC-10GH5	A03	1	SERVICE VALVE		
7	HWRAC-50WEA	A06	1	SERVICE VALVE		
8	HWRAC-50WED	A03	1	ELECTRIC EXPANSION VALVE		
9	HWRAC-25WXD	A04	1	SOUND PROOF		
10	HWRAC-25WXD	A05	2	SOUND PROOF		
11	HWRAC-25WXD	A06	1	SOUND PROOF		
12	HWRAC-25WXD	A07	3	RUBBER RING		
13	HWRAC-25WXD	A08	1	O. L. R COVER		
14	HWRAC-50WEA	A12	1	CONNECTING CORD (COMP)		
15	HWRAC-50NX2	A16	1	THERMISTOR (DEFROST)		
16	HWRAC-50NX2	A17	1	THERMISTOR SUPPORT		
17	HWRAC-25WXD	A09	1	COIL (REVERSING VALVE)		
18	HWRAC-50WED	A07	1	COIL (EXPANSION VALVE)		
19	HWRAC-50WED	A08	1	PARTITION		
20	HWRAC-50WED	A09	1	REACTOR		
21	HWRAC-50WEB	A02	1	FAN MOTOR SUPPORT		
22	HWRAC-50WED	A10	1	FAN MOTOR		
23	HWRAC-50WEC	A12	1	PROPELLER FAN		
24	HWRAC-50NX2	A25	1	NUT (PROPELLER FAN)		
25	HWRAC-50NX2	A26	1	SIDE COVER (L)		
26	HWRAC-50NX2	A27	1	HANDLE		
27	HWRAC-50WED	A11	1	FRONT COVER		
28	HWRAC-50WEC	A14	1	DISCHARGE GRILL		
29	HWRAC-50WEA	A14	1	EARTH-PLATE		
30	HWRAC-E14H3	914	1	THERMISTOR (OUTDOOR TEMPERATURE)		
31	HWRAC-50WED	A12	1	SIDE COVER (R)		
32	HWRAC-18WSPA	A24	1	TC-COVER		
33	HWRAC-50WEC	A15	1	H-SHEET		
34	HWRAC-50WEC	A16	1	TERMINAL COVER		
35	HWRAC-SX18HAK	A28	1	TOP COVER		
36	HWRAC-50WED	A13	1	SERVICE VALVE COVER		
37	HWRAC-50NX2	A36	1	BUSH ASSEMBLY		
38	HWRAC-50NX2	A37	2	BUSH		
39	HWRAC-50NX2	A38	1	DRAIN PIPE		
40	HWRAC-50WEC	A17	1	ELECTRIC PARTS PLATE		
41	HWRAC-50WED	A14	1	ELECTRIC PARTS COVER		
42	HWRAC-50WEB	A07	2	SUPPORT2 (P. W. B.)		
43	RAC-1F50KVY	014	1	HEAT SINK		
44	HWRAC-25WXE	A01	HWRAC-35WXE	A01	1	P. W. B. (MAIN)
45	HWRAC-50WEB	A11	2	CORD (REACTOR)		
46	HWRAC-50WED	A16	1	TERMINAL BOARD (5P)		
47	HWRAC-50WED	A17	1	FUSE (25A)		
48	HWRAC-25WXD	A11	2	FUSE (3. 15A)		
49	HWRAC-50WEB	A13	1	SUPPORT1 (P. W. B.)		